



KP307-UEWB Thermal Receipt Printer

User Guide & Installation Manual



Model: KP307-UEWB

What This User Manual Covers



How to Download Driver



How to Connect with USB



How to Connect with LAN / Ethernet



How to Connect with WiFi



How to Connect with Bluetooth



How to Connect with Bluetooth

Download Driver from QR Code Or Visit Website

Download Driver for **KP307 Receipt Printer**



Scan QR Code

OR



Step-1 www.shreyanspos.com

Step-2 Click on Driver & Demo

Step-3 Select Receipt Printer

Step-4 Select KP307

Step-5 Click On Download Windows Driver

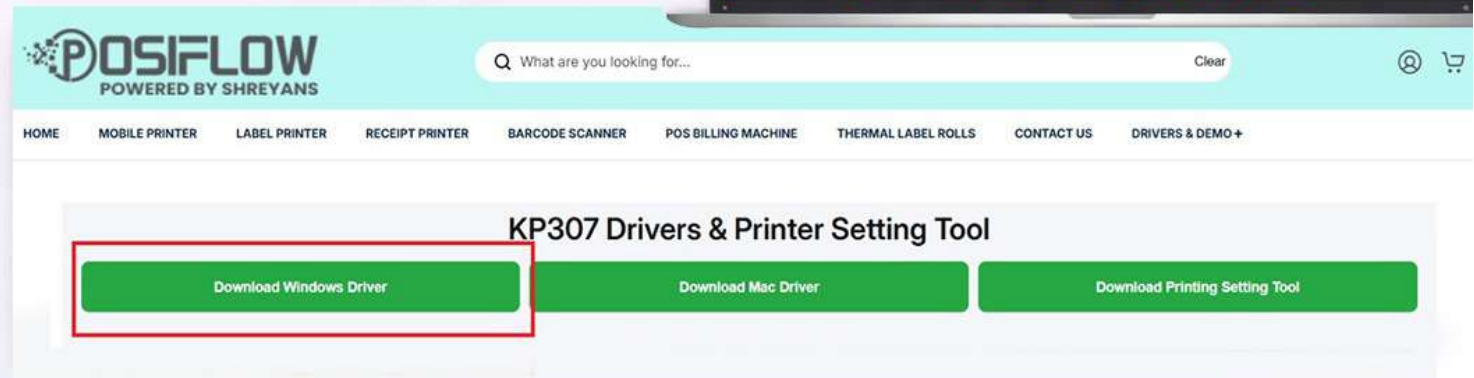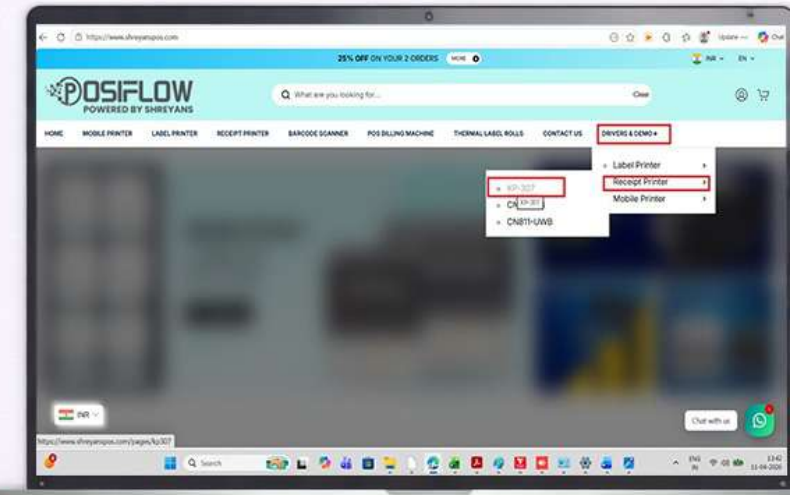

Scan QR Code >



Visit Website. >



Download Driver >




Install Driver >




Connect Printer via USB Cable — Follow Steps Below



Step-1 Connect Printer
Via USB Cable

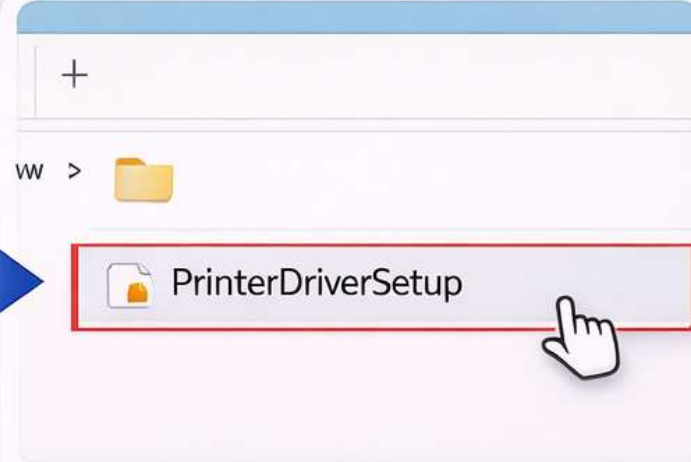

Step-2 Run Driver File

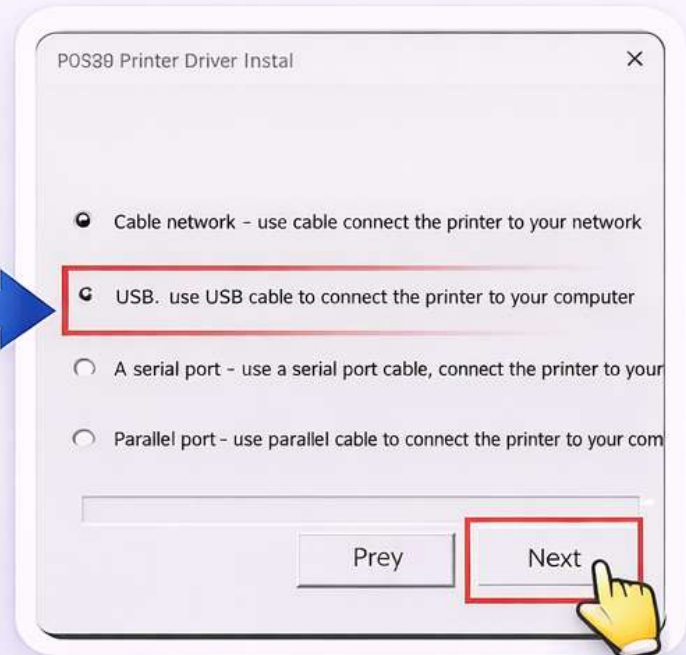

Connect Printer



Run Driver File

Printer Driver Install Successfully



Connect Printer via LAN / Ethernet – Follow Steps Below

STEP-1 Connect Printer with LAN

- Insert the LAN / **Ethernet cable** into the printer
- Connect the other end to your Router / Network Switch

LAN Cable Connected to Printer



LAN Cable Connected to Printer

IMPORTANT: Find the **IP Address** on the printed test page

Example: **192.168.XX.XX**

STEP-2 Printer Will Print Test Page

- After inserting the LAN cable, the printer will print **Test Page**
- You will find the **IP Address** on the printed page
- It will look like: **192.168.XX.XX**

Find IP Address on Test Page





192.168.XX.XX

Printer Prints Page



STEP-3 Run Driver File & Enter Printer IP Address

- Run the **Driver File**
- Select **Cable & Network** option
- Click **Next**
- Enter the **IP Address** found in **Step-2**

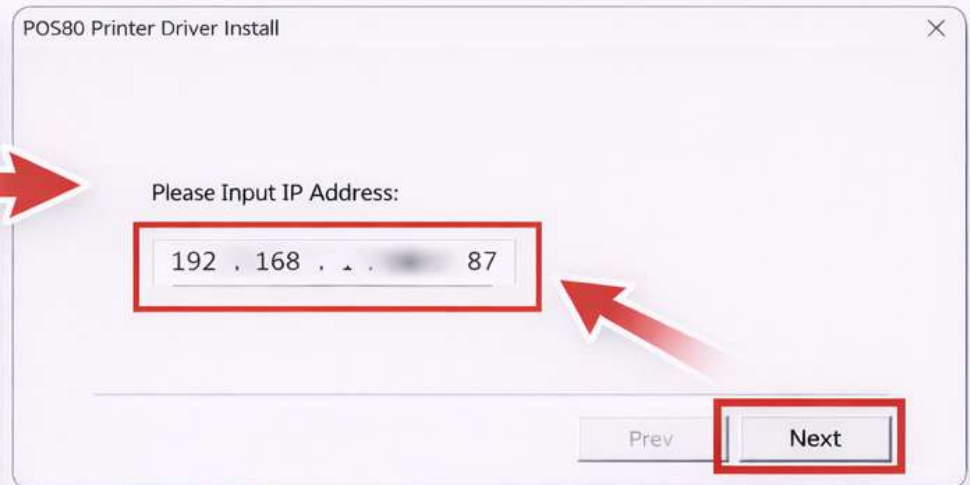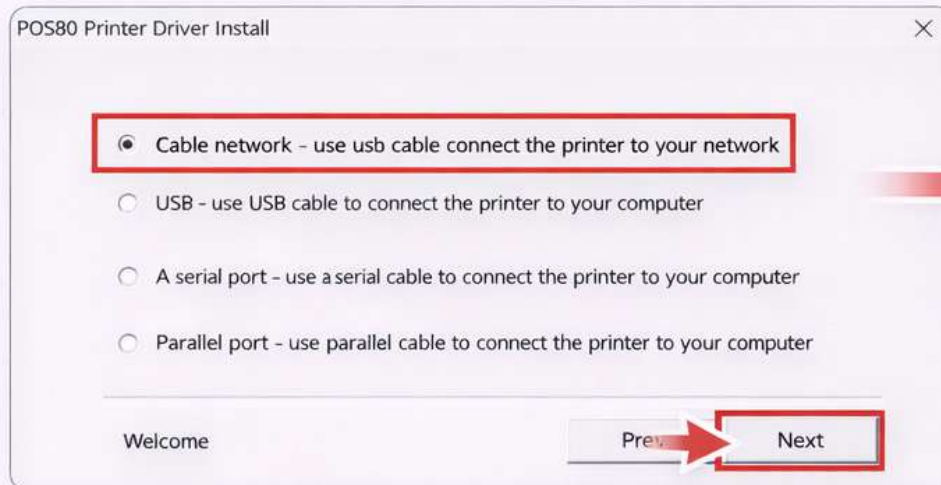

IMPORTANT:

Enter the **IP Address** found in **Step-2**




Connect Printer via WiFi — Follow the Steps Below

STEP-1 Connect Printer with

- Search for **WiFi** Name **KP307-UEWB**
- Enter Password **88888888** (8 times 8)

IMPORTANT:

Make Sure the **Printer is ON** and the Indicator Light is Blinking

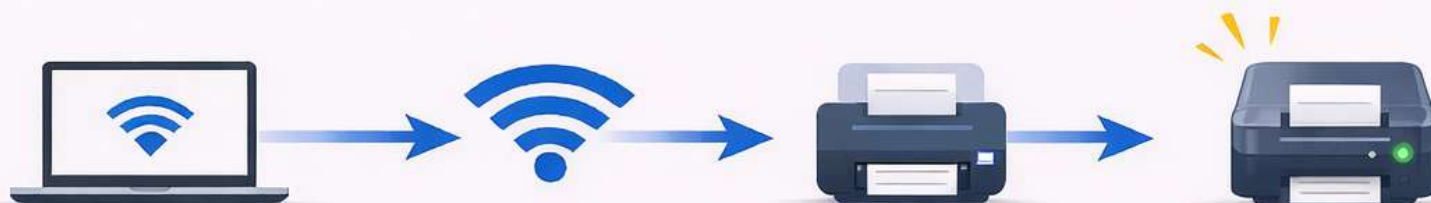

STEP-2


STEP-3

Open Browser and Configure WiFi Settings

STEP-2

Open Browser

- Enter **192.168.223.1** in the address bar of your browser

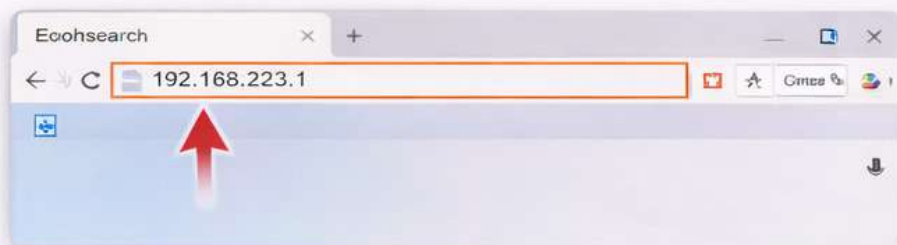

IMPORTANT:

- ⚠️ **WiFi Name & Password** must be exactly same as your Router settings

STEP-3

Configure WiFi

- Click on **WiFi** section
- Enter your Internet **WiFi Name** and Password
- Click on **Set**



STEP-4 Retrieve IP Address from Test Page

Printer Will Print Test Page Automatically

- After clicking **Set**, the printer will make **one beep sound** and will automatically print one **Test Page**
- You will find the **IP Address** on the printed page.
- It will look like: **192.168.XX.XX**

IMPORTANT:

⚠ Find the IP Address on the printed test page
Example: **192.168.XX.XX**



STEP-5 Run Driver File & Enter Printer IP Address

- Run the **Driver File**
- Select **Cable & Network** option
- Click **Next**
- Enter the **IP Address** found in **Step-4**

POS80 Printer Driver Install

☒ Cable network - use cable connect the printer to your network

☐ USB - use USB cable to connect the printer to your computer

☐ A serial port - use a serial port cable, connect the printer to your computer

☐ Parallel port - use parallel cable to connect the printer to your computer

Welcome

Prev Next

POS80 Printer Driver Install

Please Input IP Address:

192 . 168 . 1 . 87

Prev Next


IMPORTANT:

Enter the same IP Address printed in **Step-4** test page
Example: **192.168.XX.XX**



Connect Printer via Bluetooth – Follow Steps Below

How to Connect Printer via Bluetooth for Mobile

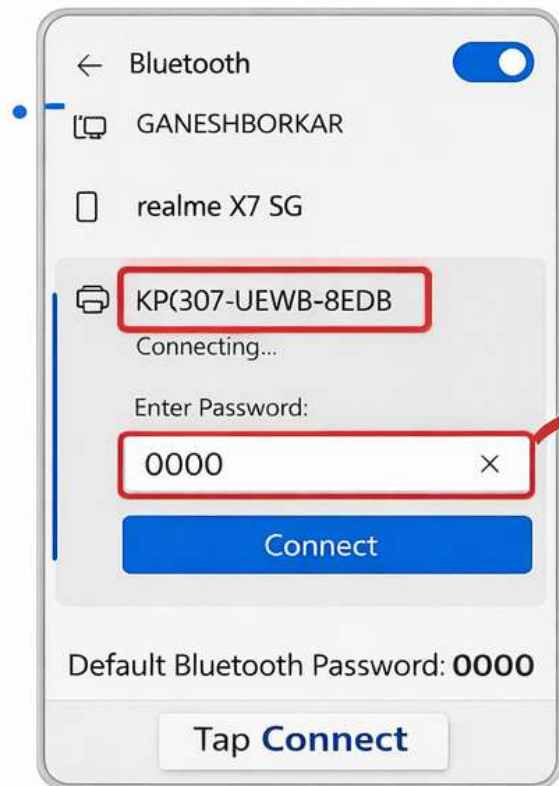

Step-1 Connect Printer via Bluetooth (Mobile)


- Go to Bluetooth Setting
- Search for **KP307-UEWB**
- Enter Password **0000**

Default Bluetooth Password: **0000**

Tap **Connect**

To Print via Bluetooth From PC / Computer Follow Below Steps:

- ↓ Install Printer Driver
- 📶 Go to Bluetooth Setting
- ℹ️ Turn ON Bluetooth
- 🔌 Connect printer

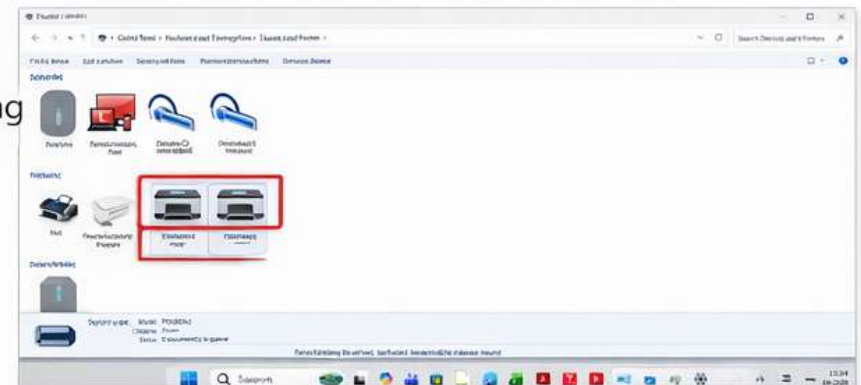

Step-1 Connect Printer via Bluetooth (Mobile)


i Make sure to print using: **POS80 Printer**
Not: **KP307-UEWB** Bluetooth device



Configure Bluetooth COM Port – Follow Steps Below


STEP-2 – Find Bluetooth COM Port

- Right click on **KP307-UEWB**
- Click on **Properties**
- Click on **Hardware**
- You will find your **Bluetooth COM Port**

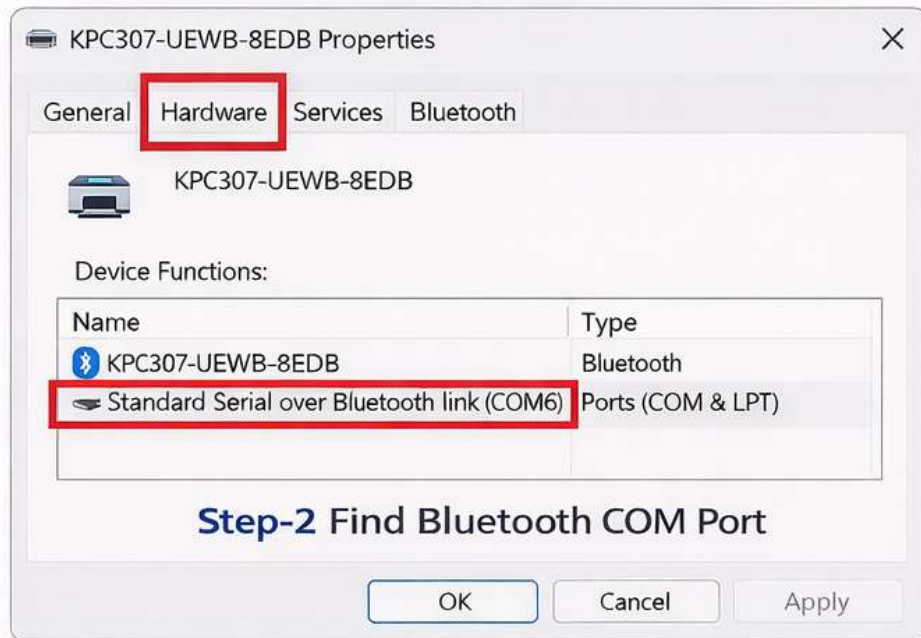

STEP-3 – Set COM Port on Driver

- Right click on **POS80 Printer**
- Click on **Printer Properties**
- Click on **Ports**
- Select the same COM Port found in Step-2

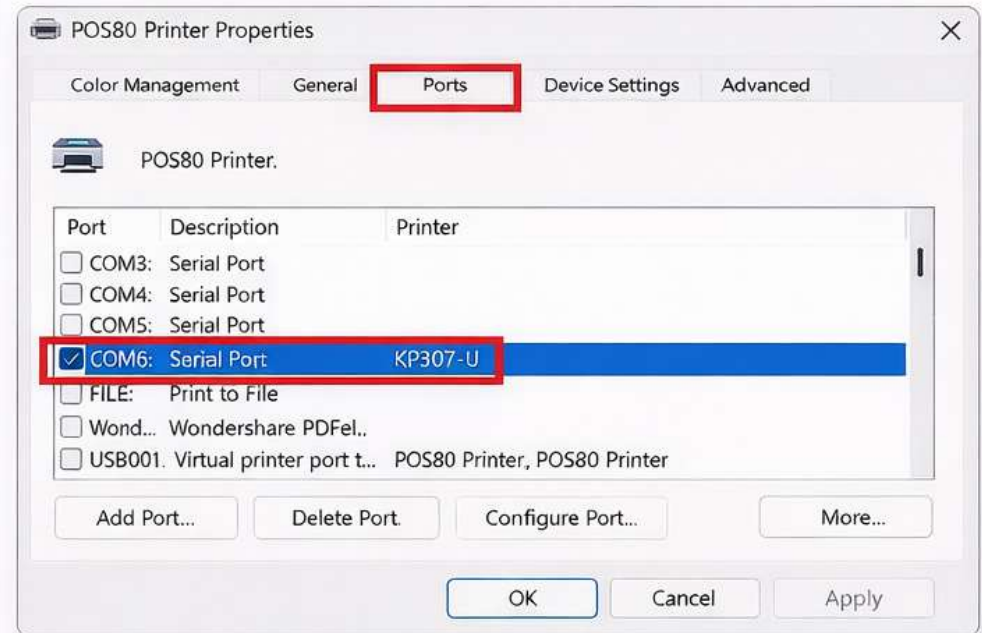

i Make sure both ports are the same
Example: COM6 in Bluetooth Device
COM6 in Printer Driver

